GNX4 Software Release Notes Version 1.3

Reduced display flicker under CPU loading.

Fix for audio pop when changing Talker types.

Fix for not being allowed to enter PATTERN/FILE from Preset Mode using footswitches.

Eliminated timeout of PATTERN/FILE (flashing) mode. User must now double press footswitches to exit this mode.

Treadle min and max points widened upon entering preset to allow more precise control of pedal parameters by minimizing dead space.

Fix for speaker compensation display after being changed in bypass or tuner mode.

Fix for LFO2 not working when LFO1 is set to a high frequency. Fix for Spread Delay not correctly loading on preset change. Improved pitch down shifting in Whammy/IPS/Mod FX modules.

Fix for not storing the current preset number when doing a preset store operation while being connected to X-Edit.

Fix for X-Edit not getting notification of assignment unlink.

Minimized the delay time (to lowest possible) from the moment the Looper RECORD button or footswitch is pressed until the track

begins recording.

Fix for UNDO last loop track causing loop of zero length.

Took out Recorder F FWD and REWIND functions when MP3 backing track is selected.

Disable MP3 demo Play and Stop footswitches. The demo can only be controlled from the Recorder Control panel transport buttons.

Fix for multiple GNX4s connected to a PC with the CF Storage mode enabled which was causing a crash.

Fix for speaker compensation always affecting the recorded guitar signal. The signal now follows the position of the XLR speaker compensation switch.

Fix for REAMPUSB function. Removed the dry signal from being mixed back in.

Added new demo mode code for point of purchase display units (does not effect standard production units).

Fix for staying on Level or Pan parameter after changing song.

Fix for CF Busy lockup when reading MP3 or MIDI folder.

Fix for CPU stack problem when sequential FFWD or REWIND buttons caused a stuck on READING compact flash card condition.